Connecting Multiple CFP Panels

CFP TO MULTIPLE CFPs

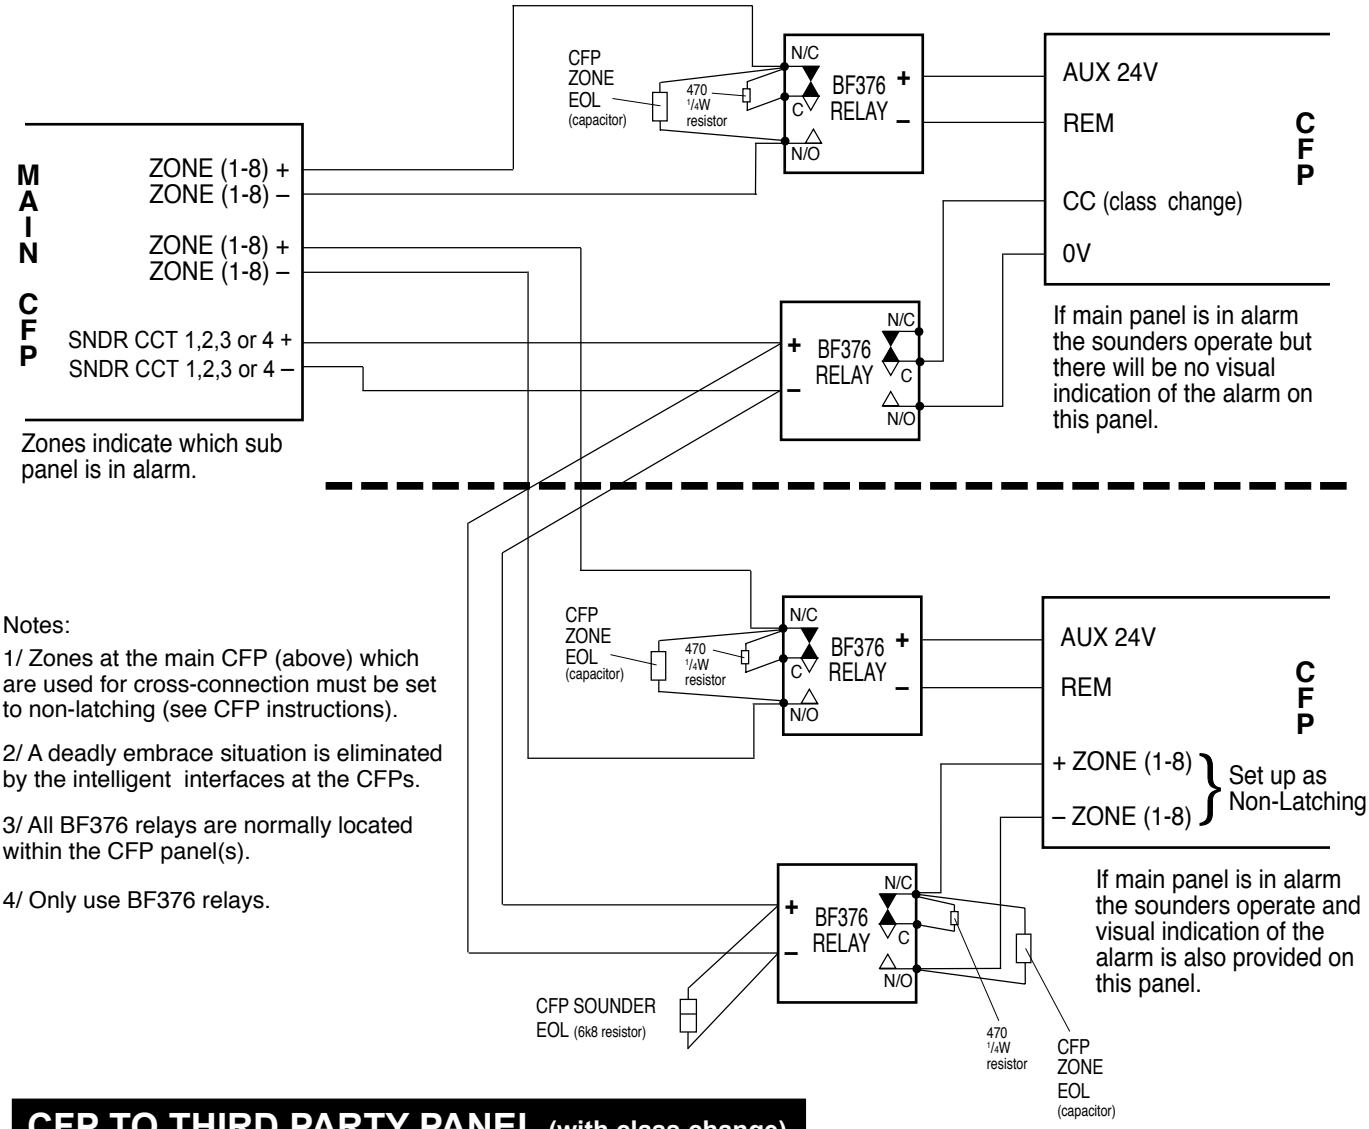

Notes:

1/ Zones at the main CFP (above) which are used for cross-connection must be set to non-latching (see CFP instructions).

2/ A deadly embrace situation is eliminated by the intelligent interfaces at the CFPs.

3/ All BF376 relays are normally located within the CFP panel(s).

4/ Only use BF376 relays.

CFP TO THIRD PARTY PANEL (with class change)

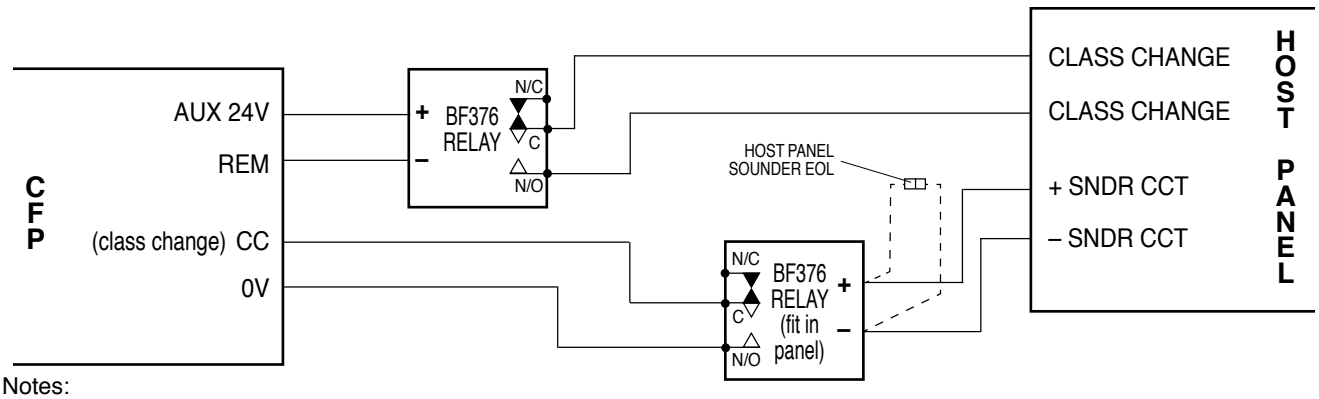

Notes:

1/ A deadly embrace situation is eliminated by the CFP's intelligent interface.

2/ Only for use with panels that require a volt-free n/o switch to initiate the class change action.

3/ Only use BF376 relays.